



Ronto Enterprise Networking Solution

Captive Portal Customization Guide

Version: V0.1

Ronto Version: V2.7.2

SonicFi Inc.
Address: 1F., No.222, Shijie Rd., East Dist.,
Hsinchu City 300, Taiwan (R.O.C.)

Index


Preview Tab	2
1. Outer Background Color	2
2. Content Background Image	3
3. Custom Logo Image	4
4. Content Text Color	5
5. Headline	6
6. Headline Color	7
7. Subhead	8
8. Subhead Color	9
9. Text Color In Input Box	10
10. Input Box Color	11
11. Text Color In Button	12
12. Button Color	13
13. Terms of Service Text	14
Setting Tab	14
1. Profile Name	14
2. Idle Timeout	14
3. Connection Timeout	14
4. Username	14
5. Password	15
6. Redirect	15

Preview Tab


1. Outer Background Color

In the color picker interface (as shown below), drag the slider or input a HEX value to adjust to your preferred color.

After adjusting the color, click the **Confirm** button to apply and save your selection.

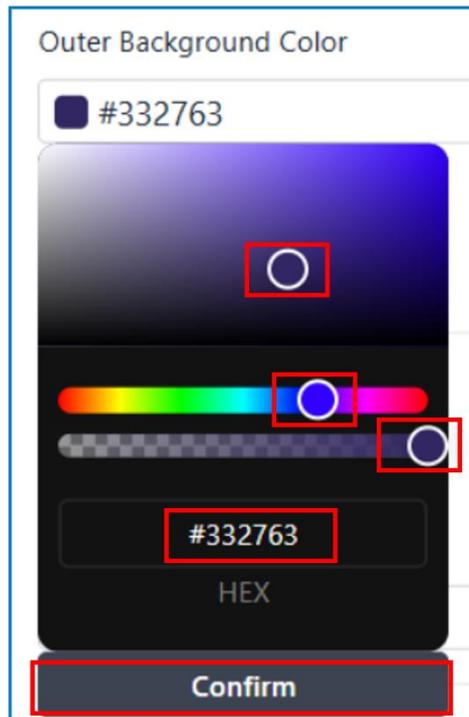

The updated color value will be shown in Loading Page

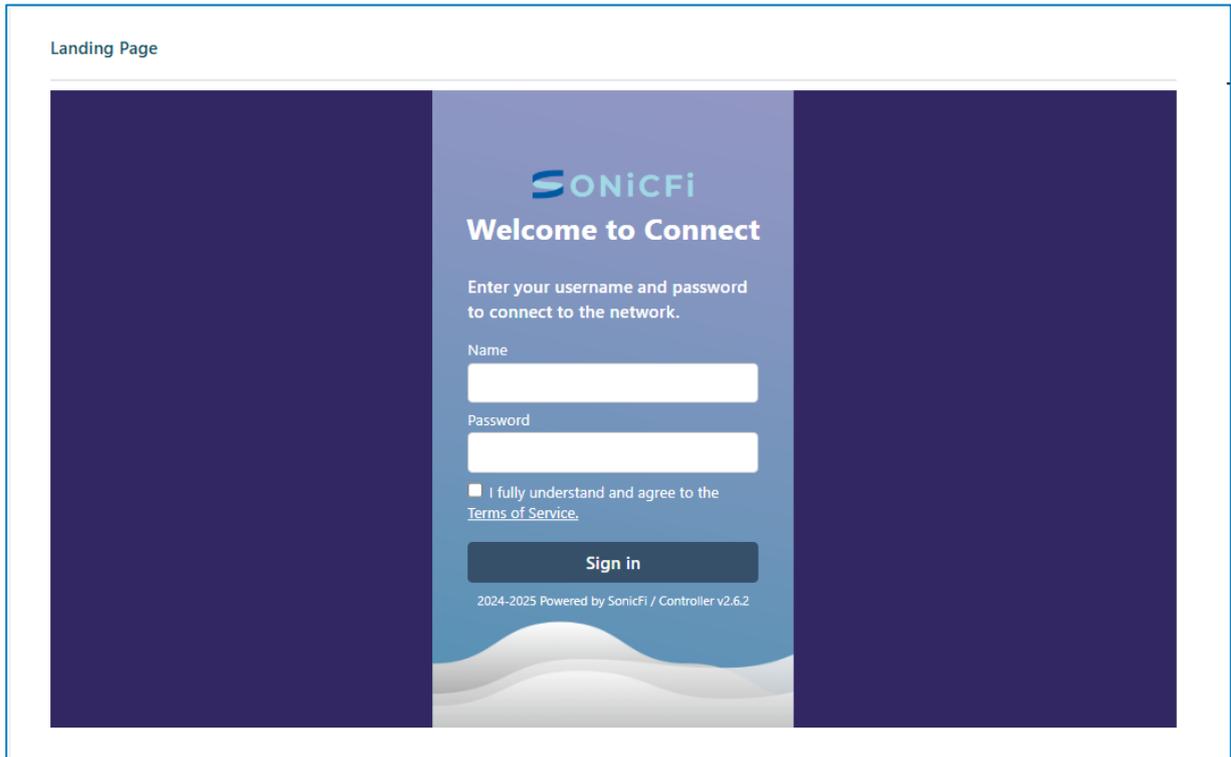

2. Content Background Image


Click the **Choose File** button to browse and select the image file you would like to set as the background.

Allowed formats: JPG, PNG

Max size: 100KB

Recommended aspect: 16:9

Once selected, the image will be automatically applied and displayed on the loading page.

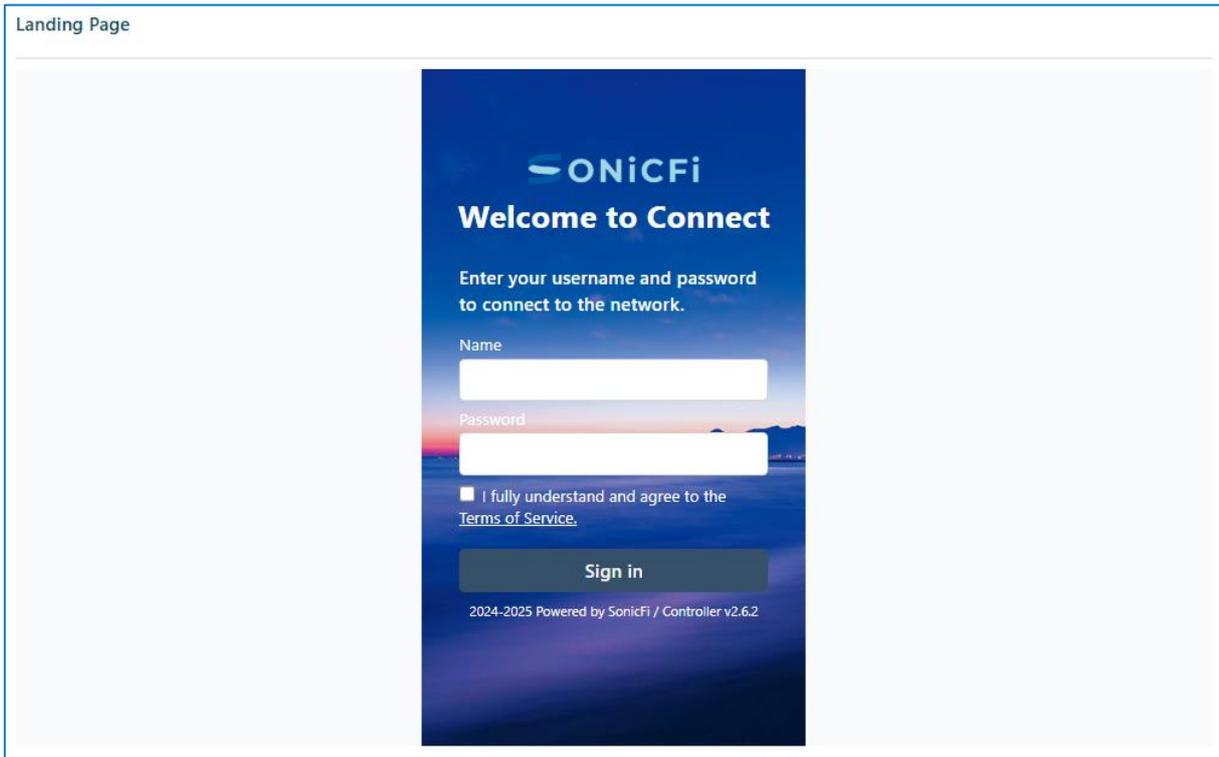

3. Custom Logo Image


Click the **Choose File** button to browse and select the image file you would like to set as the Logo.

Logo scales proportionally within max width/height 156/112px and min height 25px. Keeping aspect ratio.

Formats: JPG, PNG

Max size 10KB

Once selected, the image will be automatically applied and displayed on the Loading Page

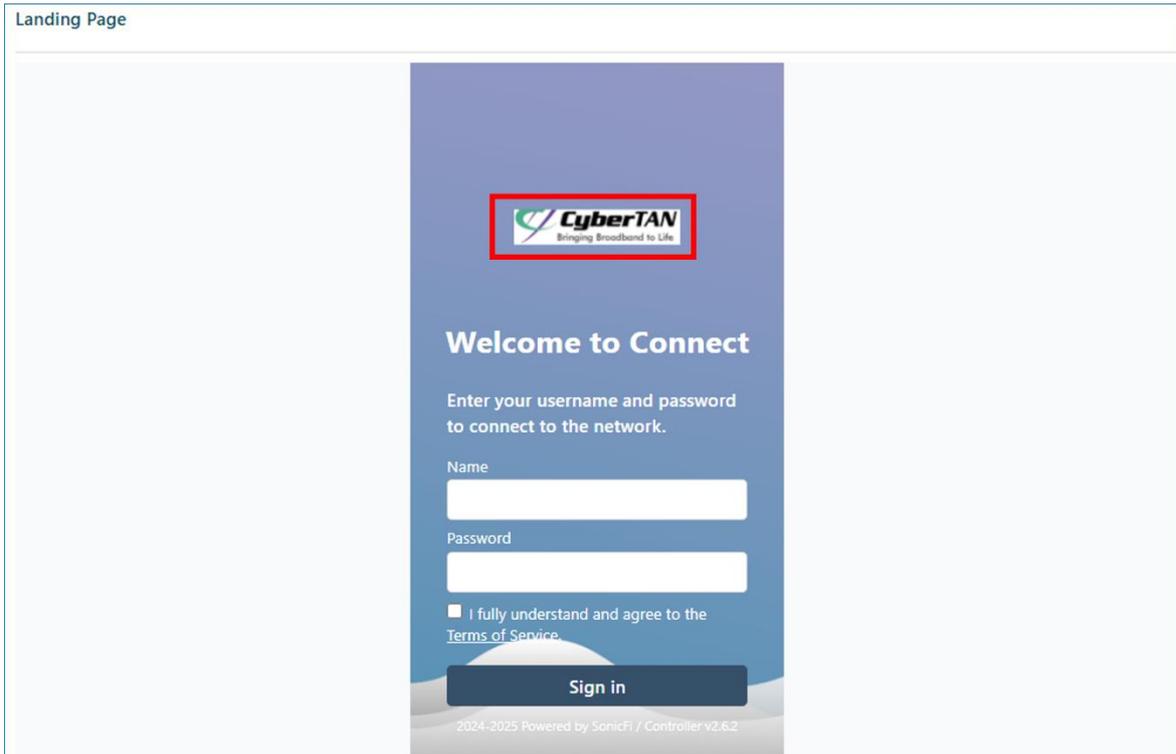


4. Content Text Color

In the color picker interface (as shown below), drag the slider or input a HEX value to adjust to your preferred color.

After adjusting the color, click the **Confirm** button to apply and save your selection.



The updated color value will be shown in Loading Page

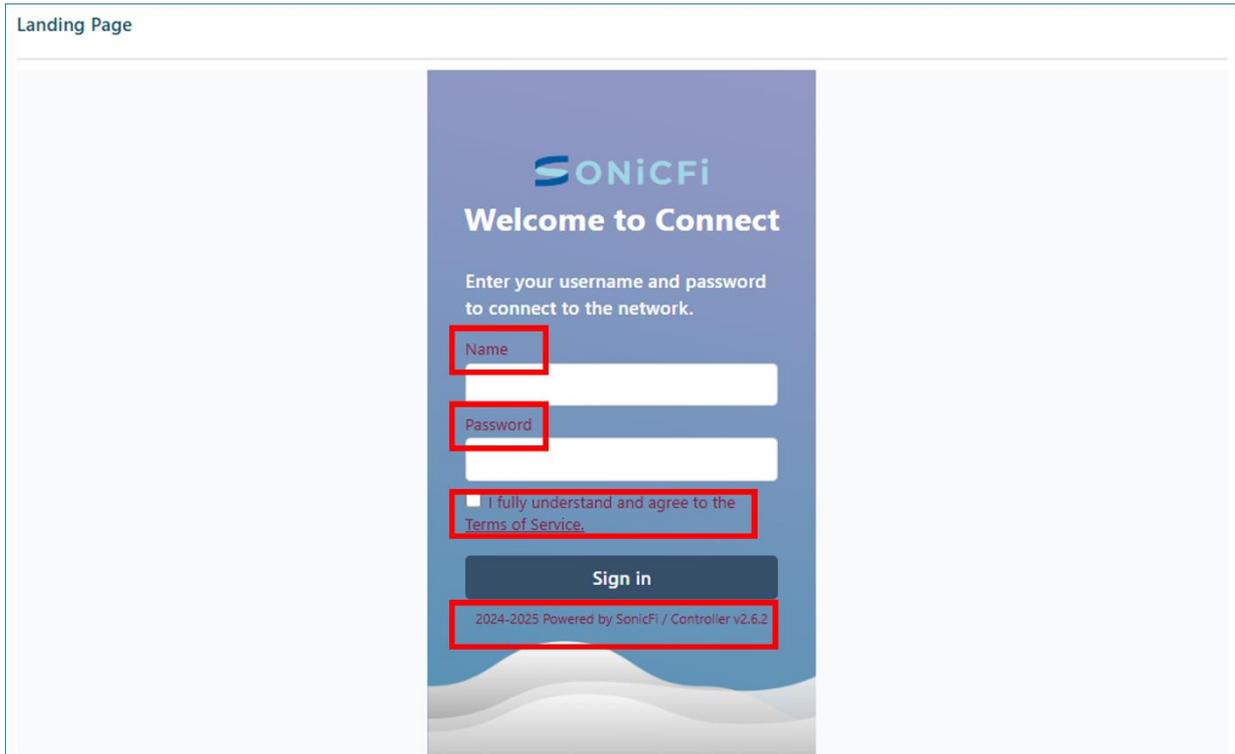


5. Headline

Enter the main title text displayed on the page. Up to 32 characters.

A screenshot of a configuration interface. It features a label "Headline" with a question mark icon to its right. Below the label is a text input field containing the text "Welcome to Cybertan". The entire configuration area is enclosed in a blue-bordered box.

The updated result will be displayed on the Loading Page.

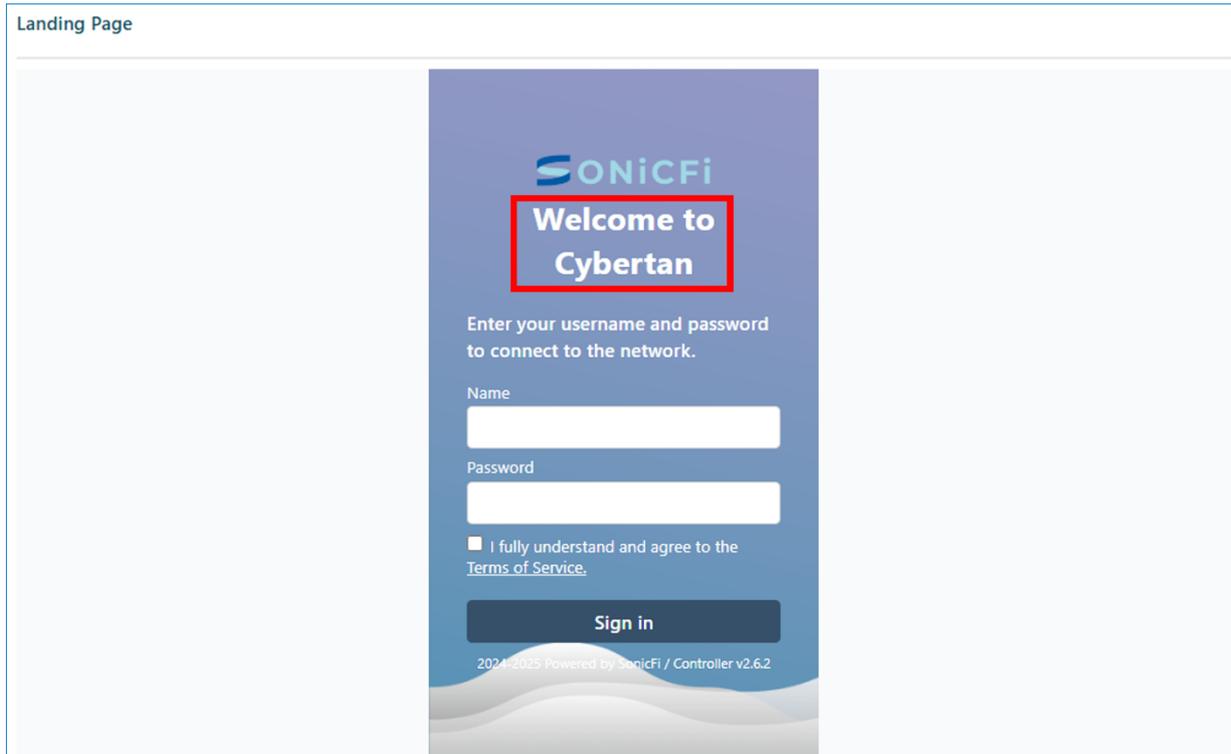


6. Headline Color

In the color picker interface (as shown below), drag the slider or input a HEX value to adjust to your preferred color.

After adjusting the color, click the **Confirm** button to apply and save your selection.



The updated color value will be shown in Loading Page

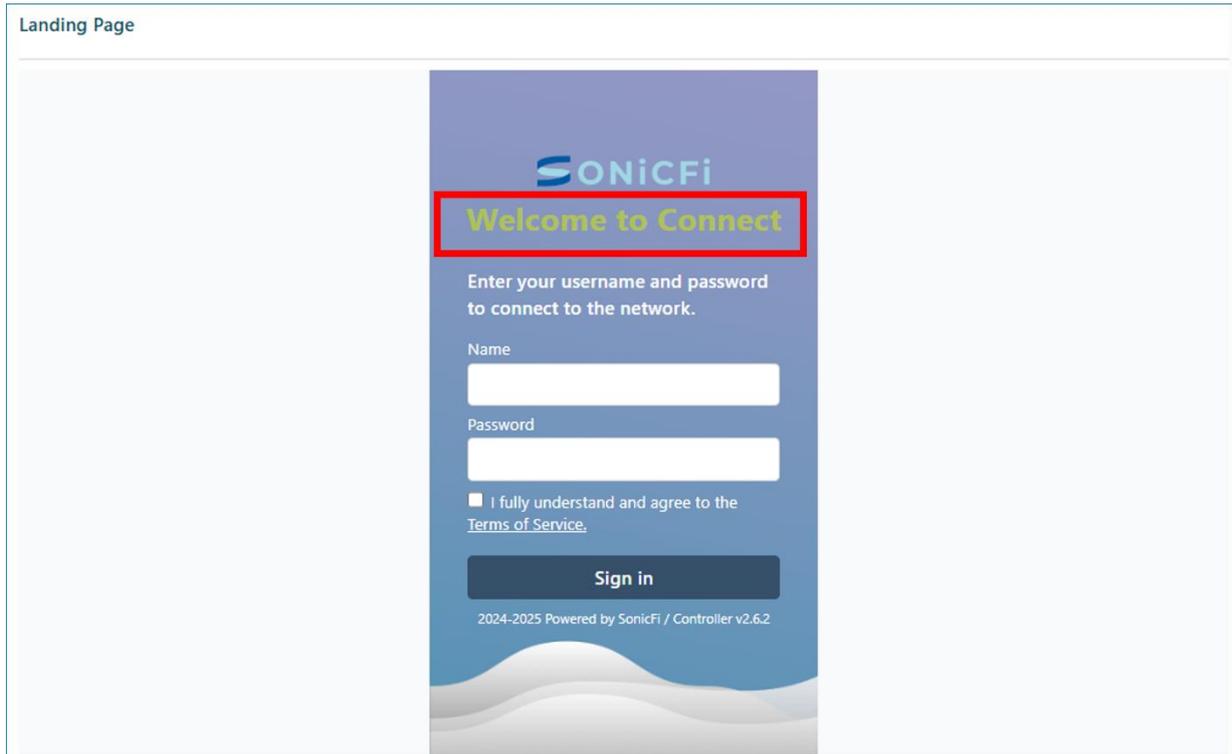


7. Subhead

Enter the subtitle text displayed below the headline. Up to 256 characters.

Subhead ?

Try to connect to network


The updated result will be displayed on the Loading Page.

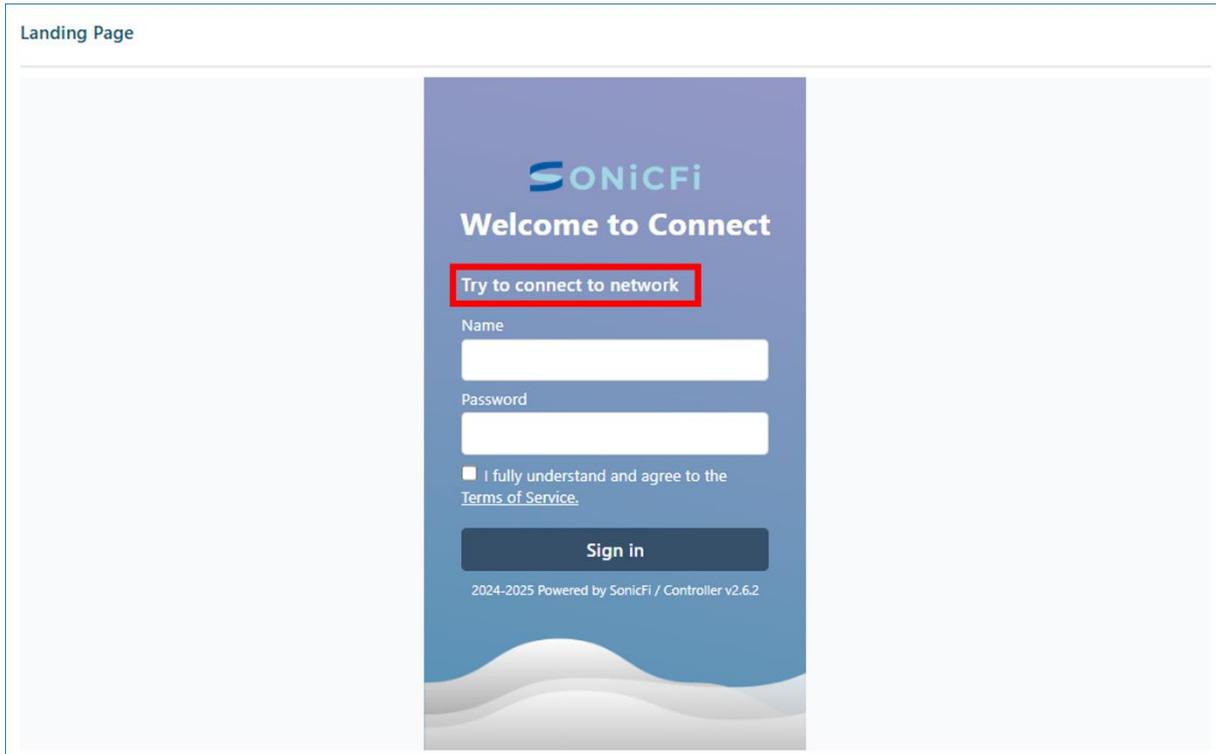

8. Subhead Color

In the color picker interface (as shown below), drag the slider or input a HEX value to adjust to your preferred color.

After adjusting the color, click the **Confirm** button to apply and save your selection.

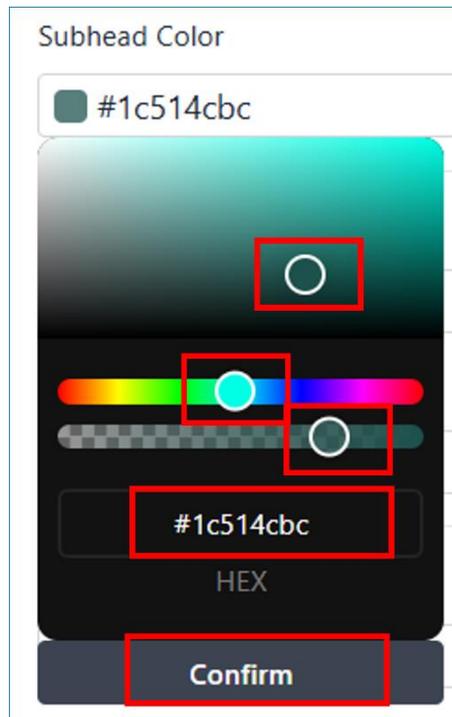

The updated color value will be shown in Loading Page




9. Text Color In Input Box

In the color picker interface (as shown below), drag the slider or input a HEX value to adjust to your preferred color.

After adjusting the color, click the **Confirm** button to apply and save your selection.




The updated color value will be shown in Loading Page

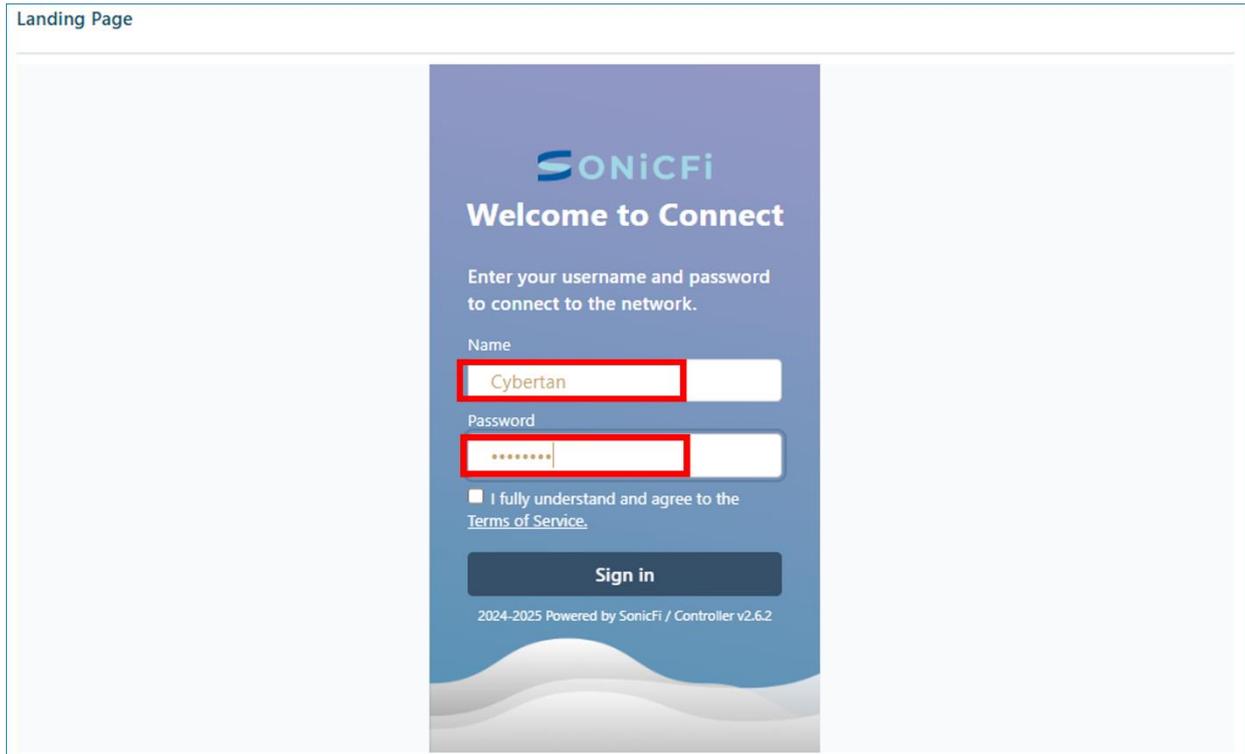


10. Input Box Color

In the color picker interface (as shown below), drag the slider or input a HEX value to adjust to your preferred color.

After adjusting the color, click the **Confirm** button to apply and save your selection.

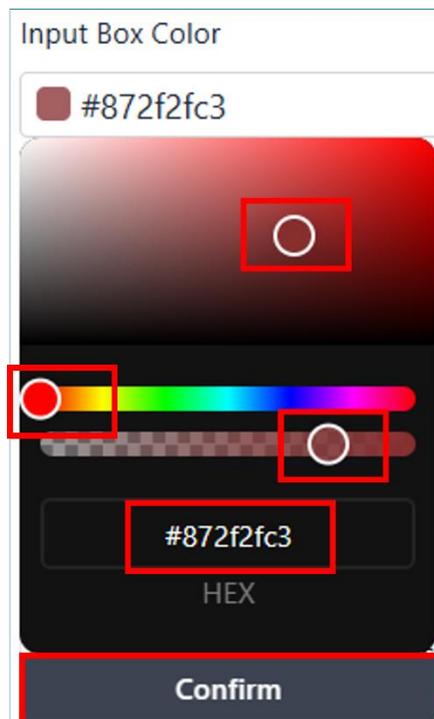

The updated color value will be shown in Loading Page

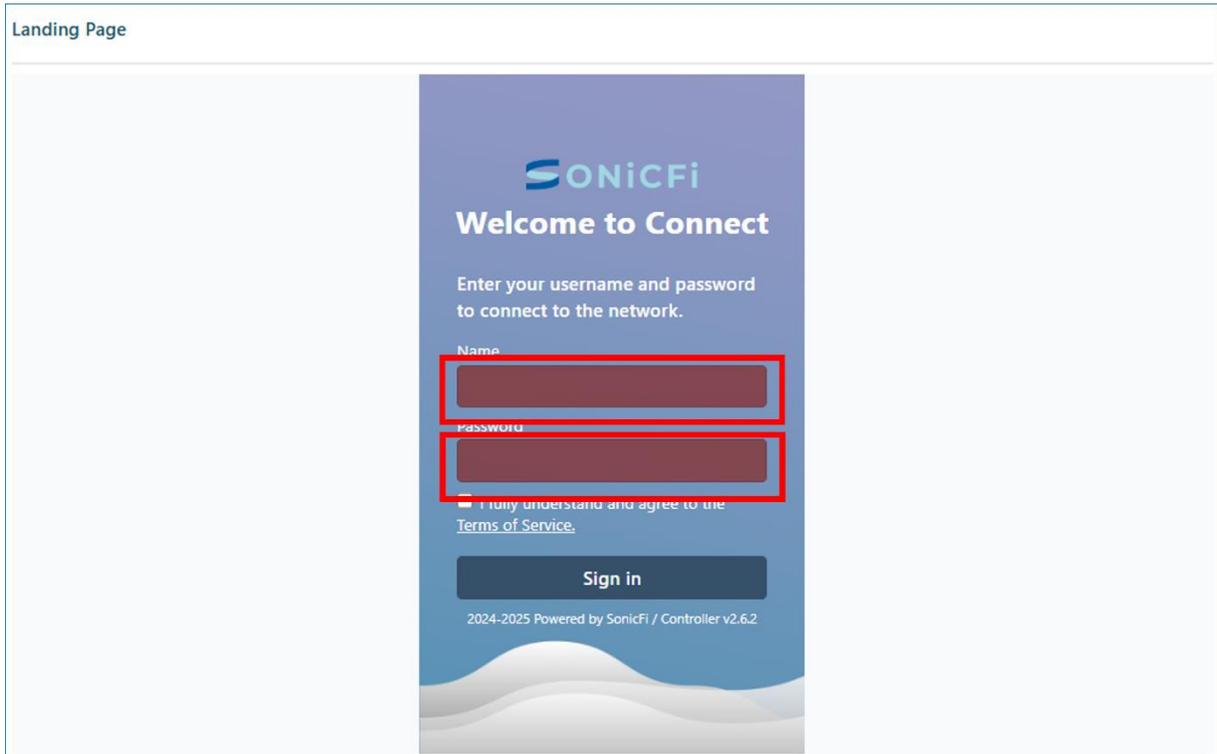


11. Text Color In Button

In the color picker interface (as shown below), drag the slider or input a HEX value to adjust to your preferred color.

After adjusting the color, click the **Confirm** button to apply and save your selection.




The updated color value will be shown in Loading Page

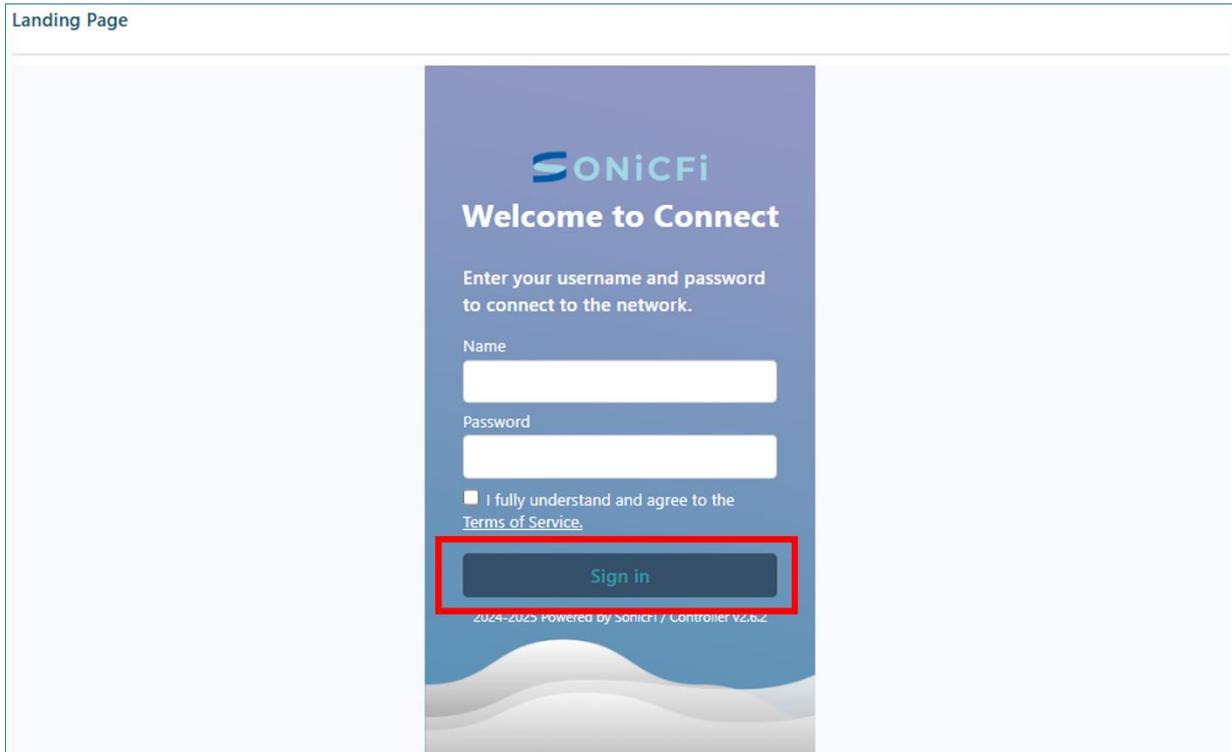

12. Button Color


In the color picker interface (as shown below), drag the slider or input a HEX value to adjust to your preferred color.

After adjusting the color, click the **Confirm** button to apply and save your selection.

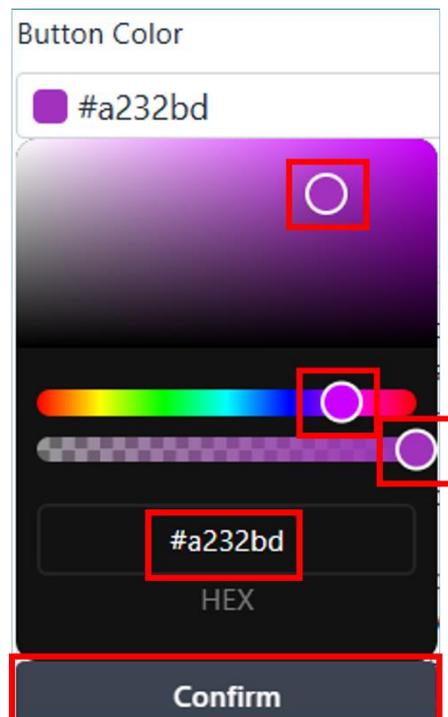

The updated color value will be shown in Loading Page

Landing Page

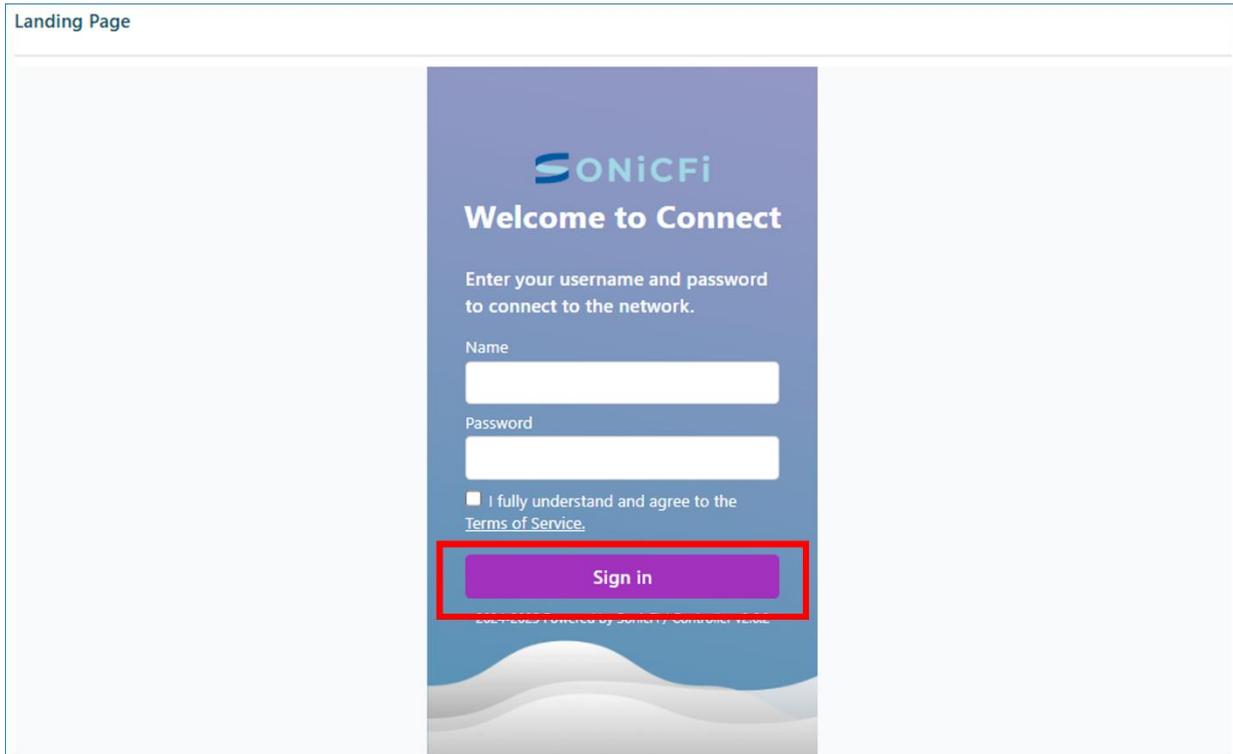

The screenshot shows a landing page for SonicFi. At the top, the SonicFi logo is displayed. Below it, the text 'Welcome to Connect' is centered. Underneath, there is a prompt: 'Enter your username and password to connect to the network.' This is followed by two input fields: 'Name' and 'Password'. Below the password field is a checkbox with the text 'I fully understand and agree to the Terms of Service.' A red rectangular box highlights the 'Sign in' button, which is a purple rectangle with white text. At the bottom of the form area, there is a decorative wave graphic.

13. Terms of Service Text

Enter the terms of service text displayed at the bottom of the page. Up to 2500 characters.

Setting Tab

1. Profile Name

Enter a name for this Captive Portal configuration.

2. Idle Timeout

Automatically logs out the user after a specified period of inactivity (in hours).

Default: Unlimited

3. Connection Timeout

Automatically disconnects the user after the maximum connection time (in hours).

Default: Unlimited

4. Username

Username must be between 8 and 32 characters and cannot include the following character: \

5. Password

The password length must be between 8 and 63 characters, and it can support the following special characters: \$ @ ! % * # ? &

6. Redirect

When enabled, user will be redirected to the specified URL after a successful login.